

Router Bus (Actions)



The information is relevant for version [2.9.96](#) and later.

Description of [Router Bus](#) Actions.

Set pin

Switching the input signal to a specified output of the matrix switcher.

Parameters

- * **Param1** - comma-separated list of matrix switcher names (Router Name).
- * **Param2** - output pin number (starts with 1).
- * **Param3** - input pin number (starts with 1).

Do effect

Performing a device-dependent operation.

Parameters

- * **Param1** - comma-separated list of matrix switcher names (Router Name).
- * **Param2** - effect number (see your matrix switcher documentation).
- * **Param3** - effect speed, optional parameter.
- * **Param4** - effect type, optional parameter.

Set effect param

Sets a specific effect parameter.

Parameters

- * **Param1** - comma-separated list of matrix switcher names (Router Name).
- * **Param2** - parameter name:
 - type

- speed
- mix
- src

* **Param3** - effect type, optional parameter.

Enable control

Enables control of a connected hardware device. Added in [2.9.96](#).

Parameters

No parameters.

Disable control

Disables control of a connected hardware device. Added in [2.9.96](#).

Parameters

No parameters.

From:

<http://wiki.skylark.tv/> - **wiki.skylark.tv**

Permanent link:

http://wiki.skylark.tv/api/actions/router_bus

Last update: **2023/06/02 07:07**

