

Replay Server Management from JavaScript via Instant Replay API

This page demonstrates possibilities of Skylark Instant Replay API.

To manage the replay server, open this page in a browser within one network with the replay server.

The server must have access permission by the 10042 port for the XML-RPC protocol.

- Server IP (necessarily) – your server IP address. To apply, press Set IP.
- Clip Name (optional) – name of the clip (including [multi-cam](#)) in the server database that must be loaded to the replay server tray. For loading, press Load.

[Slow Motion and Instant Replay Servers SL NEO 7000](#)

From:

<http://www.wiki.skylark.tv/> - **wiki.skylark.tv**

Permanent link:

http://www.wiki.skylark.tv/api/examples/control_replay_service_with_javascript

Last update: **2024/12/13 07:44**

