

# Prompter Module

[Module Prompter](#) [Client](#)

The Prompter server module is supplied as part of the Skylark software and is automatically activated when the Neovid module starts.

## Initial Configuration

Basic configuration is required before the first launch of the web application.

## Licence Installation

The licence file must be named "license-prompter.lic" and located in one of the folders:

- For servers with software up to and including version 2.10.x: "C:\Program files (x86)\SL NEO Media Platform\run",
- For servers with software version 2.11.x: "%LOCALAPPDATA%\SLNEO\Run".

In [licences](#), the following fields must be activated: `fld_prompter_channels` and `fld_prompter_clients`.

## Adding User Groups

The Prompter module uses an authorisation system based on the [Storage](#) module. Before you start, you need to create the following user groups in the media storage used for user authorisation:

- **Prompter\_User** - users from this group can authorise and control text scrolling.
- **Prompter\_Editor** - users from this group enable 'Prompter\_User' permissions, and can change the text in the prompter interface and update it in the programme channel (in case of working in Program mode),
- **Prompter\_Admin** - users in this group include 'Prompter\_User' and 'Prompter\_Editor' permissions, and can change and save the configuration of Prompter sources.

If Storage uses [authorisation mode via LDAP](#), the specified groups must also be created in the directory service or Active Directory.

Interface configuration and module management is performed via [client web-interface](#).

From:  
<https://wiki.skylark.tv/> - **wiki.skylark.tv**

Permanent link:  
<https://wiki.skylark.tv/modules/prompter>

Last update: **2025/01/16 09:22**



